



Installation guide

- 1, For dimension of machine, please refer to machine specification respectively or contact with us.
- 2, Equipment installation: please attach the ice machine above the ice storage bin , and be sure ice outlet align with ice inlet of storage bin.
- 3, Water system installation: 0.1-0.5MPa water pressure recommended, connect water inlet with water supply, place overflow gap pipe in space where water is allowed to discharge, water discharge outlet would be used only when cleaning water tank.
- 4, Cooling tower installation: connect cooling tower , water pump and condenser according to their label and pay attention to outlet/inlet direction, insert power lines of water pump and fan to the electrical terminals inside the electric cabinet.
- 5, Main power supple installation: three phase ,five-wire system adopted with 3 live wires, a null line, a earth line, if machine is unable to start , please try to switch the two phase lines and start it again.

Maintenance

- 1, Please check cooling tower fan, bearing and water complement system regularly in case of the clog occurring, keep stuffing and condenser clean enable machine to operate in optimal condition, ensure long lifespan and efficiency.
- 2, Cleaning of water tank and water distribution tray is pretty necessary for the fact that water scale ,bacteria and sediment would occurred inside as time goes by ,for securing clean ice you will get ,please wash them with specified detergent and disinfect later.

| | | | | | | | | |
|---|--|--|----|--|---------------------------------|--|----|---|
|  | | 深圳市中雪制冷设备有限公司 Shenzhen Zhongxue Refrigeration Equipment Co.,Ltd | | | Water cooling flake ice machine | | | |
| 设计 | | | 审批 | | 图号 | | 件号 | |
| 制图 | | | 审核 | | 数量 | | 共 | 张 |
| 标检 | | | 会审 | | 比例 | | 第 | 张 |
| 校对 | | | | | | | | |

| | |
|----|----|
| 设计 | 签字 |
| 制图 | |
| 校对 | |
| | |
| | |
| | |